



Grub Screw

The vented grub screw indicated in the image is fixed in position and does not require any adjustment. It is installed to ensure pressure equilibrium between the spring chamber and surrounding atmosphere.