



Thank you for purchasing this ALPHA COMPETITION product for your car!

Installation of this product should only be performed by persons experienced with installation of aftermarket performance parts and proper operation of high performance vehicles. If vehicle needs to be raised off the ground for installation, the installer must use proper jacks, jack-stands and/or a professional vehicle hoist for safety of the installer and to protect property. If the vehicle is lifted improperly, serious injury or death may occur! Please read through all instructions before performing any portion of installation. If you have any questions, please contact our tech department prior to starting installation. We can be reached by the following email:

support@alpha-competition.com

GENERAL MODIFICATION NOTE

Modifications to any vehicle can change the handling and performance. As with any vehicle extreme care must be used to prevent loss of control or roll-over during sharp turns or abrupt maneuvers. Always wear seat belts, and drive safely, recognizing that reduced speeds and specialized driving techniques may be required. Failure to drive a vehicle safely may result in serious injury or death. Do not drive a vehicle unless you are familiar with its unique handling characteristics and are confident of your ability to maintain control under all driving conditions. Some modifications (and combinations of modifications) are not recommended and may not be permitted in your country.

Consult the owner's manual, service manual, instructions accompanying these products, and local laws before purchasing and installing these modifications.


You are responsible for the legality and safety of the vehicle you modify using these components!

ALPHA COMPETITION TFSI/TSI Boost Adaptor


Installation instructions

- Locate the piping connector between the inlet manifold and the recycling tube of waste fuel fume. (img 1)


- Press both ends of the connecting clip and pull out the connector to the right (img 2)

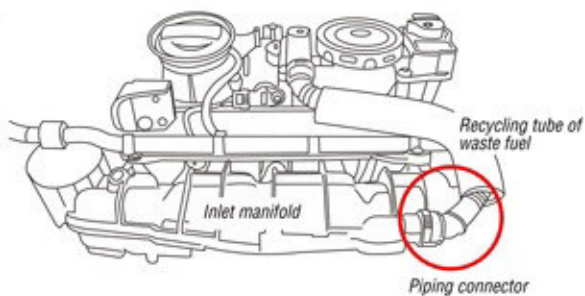


img 1

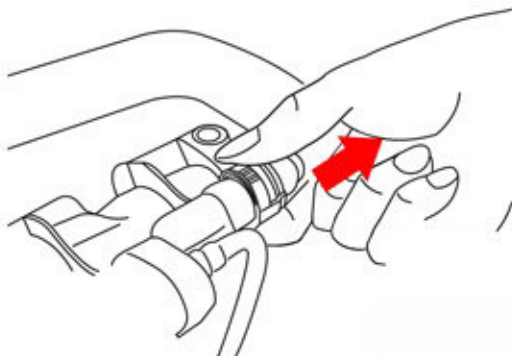

img 2

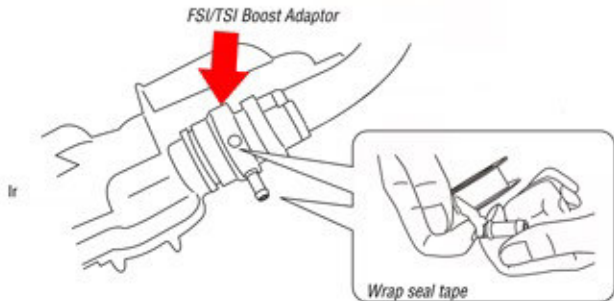

- Place the ALPHA COMPETITION TFSI/TSI Boost Gauge Adaptor in the inlet manifold and connect the recycling tube of waste fuel fume back into the adaptor. Wrap seal tape or Loctite seal gel around the aluminium alloy connector and screw it to the adaptor. Screw the SUS screws in the remaining holes. (img 3)

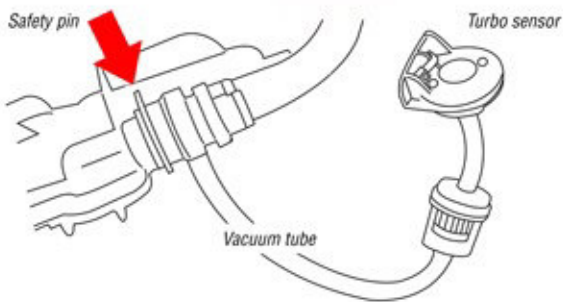

- Adjust the angle of the ALPHA COMPETITION Boost Gauge Adaptor and insert the safety pin. Then install the vacuum tube, routing from the adaptor to your boost gauge or boost sensors. (img 4)



- Make sure everything is correctly sealed and there are no leaks under boost pressure. (img 5)